


aroTHERM plus

VWL 105/6 A 230V S2 ... VWL 125/6 A S2

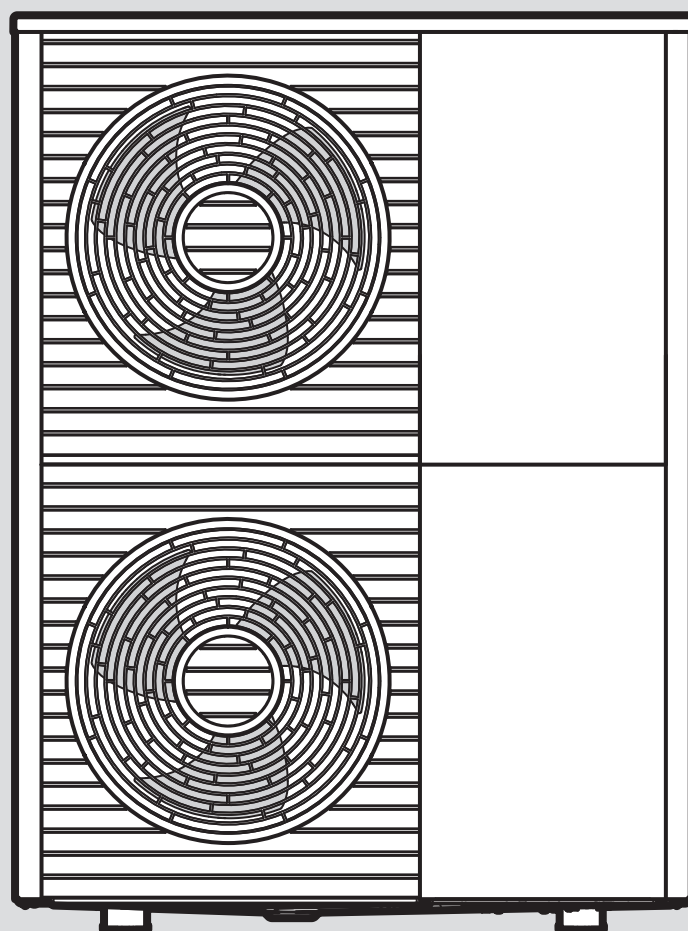

en **Operating instructions 3**

en **Installation and maintenance instructions..... 12**

Operating instructions

Contents

1	Safety	4
1.1	Intended use	4
1.2	General safety information	4
2	Notes on the documentation	6
2.1	Documents.....	6
2.2	Validity of the instructions	6
3	Product description	6
3.1	Heat pump system.....	6
3.2	Description of the product.....	6
3.3	Functions of the heat pump	6
3.4	System separation and frost protection	6
3.5	Product design	6
3.6	Data plate and serial number	6
3.7	Warning sticker	7
4	Protective zone and condensate discharge.....	7
4.1	Protective zone	7
4.2	Design of the condensate discharge	9
5	Operation	10
5.1	Switching on the product	10
5.2	Operating the product.....	10
5.3	Guaranteeing frost protection	10
5.4	Switching off the product	10
6	Care and maintenance	10
6.1	Keeping the product clear.....	10
6.2	Cleaning the product.....	10
6.3	Carrying out maintenance work.....	10
7	Troubleshooting	10
7.1	Eliminating faults.....	10
8	Decommissioning	10
8.1	Temporarily decommissioning the product.....	10
8.2	Permanently decommissioning the product.....	10
9	Recycling and disposal.....	11
9.1	Arranging disposal of refrigerant	11
10	Guarantee and customer service	11
10.1	Guarantee.....	11
10.2	Customer service.....	11



1.2.4 Risk of material damage caused by frost

- ▶ Ensure that the heating installation always remains in operation during freezing conditions and that all rooms are sufficiently heated.
- ▶ If you cannot ensure the operation, have a competent person drain the heating installation.

1.2.5 Danger caused by improper operation

Improper operation may present a danger to you and others, and cause material damage.

- ▶ Carefully read the enclosed instructions and all other applicable documents, particularly the "Safety" section and the warnings.
- ▶ Only carry out the activities for which instructions are provided in these operating instructions.



14	Recycling and disposal.....	42
14.1	Disposing of the packaging	42
14.2	Disposing of the refrigerant	42
15	Customer service.....	42
15.1	Customer service.....	42
	Appendix	43
A	Functional diagram.....	43
B	Safety devices.....	44
C	Wiring diagram.....	45
C.1	Wiring diagram, power supply, 1~/230V	45
C.2	Wiring diagram, power supply, 3~/400V	46
C.3	Wiring diagram, sensors and actuators	47
D	Inspection and maintenance work.....	48
E	Technical data.....	48
F	Commissioning Checklist.....	52
	Index	55

